

BOWEN INFO-GRAM

BOWEN WATER HEATER DIV.
HANDLING EQUIPMENT MFG. CORP. WIXOM, MICHIGAN



S-4 G

CUSTOMER SERVICE
BULLETIN

10-17-62

INSTALLATION INSTRUCTIONS GAS WATER HEATERS

just a few things to
pay particular
attention to . . .

1. The interior dimensions of the opening are 21" x 15½" for G-110M, or 21" x 23" for the G-117M and 21" x 35" for the G-130M. Please don't stretch these measurements.
2. The heater may rest on either a shelf or the floor as long as it is ½" below edge of body opening.
3. Heater must be inserted through exterior opening. Secure heater to coach with ¾" #8 rd. hd. wood screws
4. Be sure to attach draft hood to heater—same location on all models.


CAUTION: heater must be installed on exterior wall.

G-110 M

G-117 M

G-130 M


1

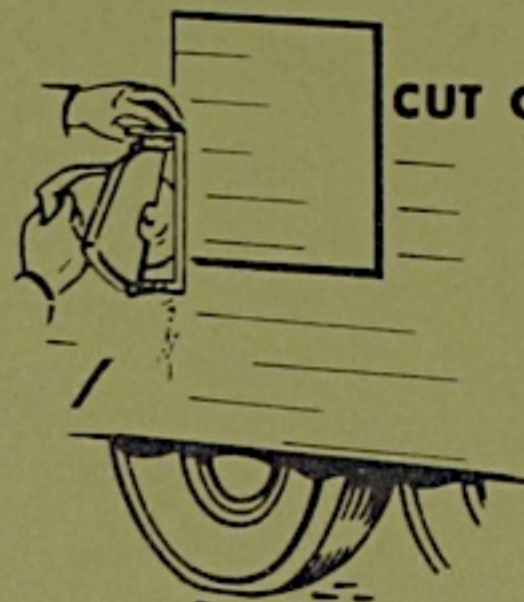

CUT OPENING

2


FRAMING
CUT-A-WAY VIEW

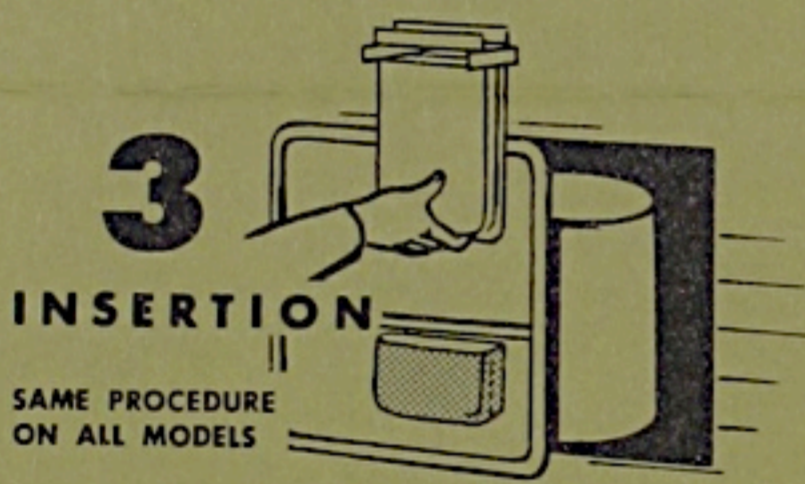

3

INSERTION


SAME PROCEDURE
ON ALL MODELS

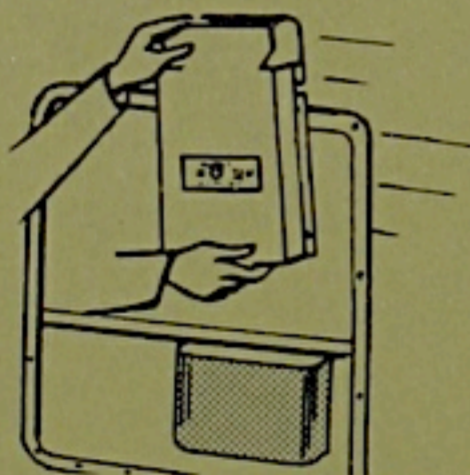

INSTALLING
DRAFT HOOD

SAME PROCEDURE
ON ALL MODELS

4

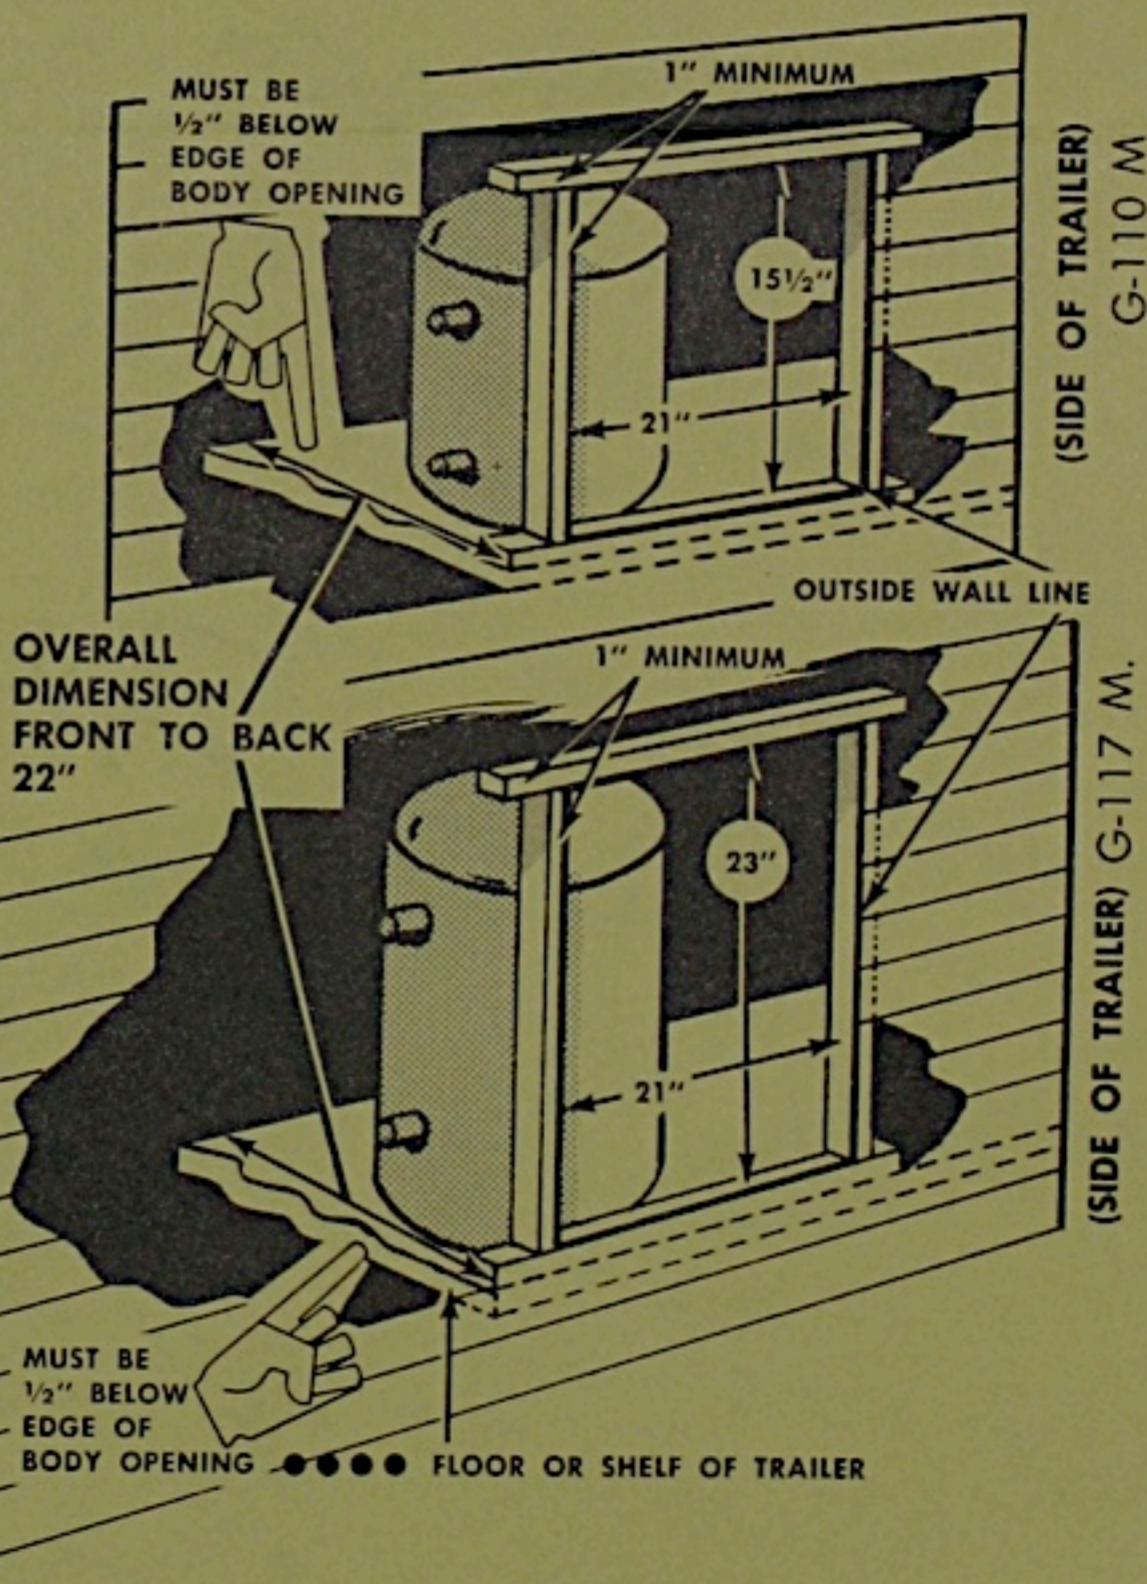

(SIDE OF TRAILER) G-110 M

(SIDE OF TRAILER) G-117 M.

MODEL G-130 M FOLLOW SAME PROCEDURES FOR INSTALLATION.

FRAMED OPENING DIMENSIONS 21" (width) x 35" (height)

BEST IN ELECTRIC ☆☆☆ **FIRST** IN GAS ☆☆☆ **FOREMOST** IN SERVICE